

Please read this introduction and all instructions completely before installing and using your UpperSlide Cabinet Caddies

PERFORMANCE GUIDANCE

- UpperSlide Cabinet Caddies are not for storing glassware, china, porcelain, ceramic, and/or glass dinnerware.
- As you extend the UpperSlide there is a tendency to pull down on the slide out and cause the slide to be hard to move/bind. We have included a thumb pull position below the center of slide out to help avoid this issue. We find it's easiest to start the “slide out” with you finger and finish with your thumb (with slight lift) to avoid pulling down and binding the slide hardware.

Introduction

Your new UpperSlide Cabinet Caddy was built using traditional wood crafting techniques with American hardwoods and veneers (plywood). These features were designed to ensure years of durability to the end-user.

All UpperSlide Cabinet Caddies are fully assembled and proudly hand-crafted by Americans with 99% “Made in USA” content, by Old Glory 1 Wood Works Co.

Wood Product Information

The quality specifications applied in our process were designed to eliminate unnecessary waste of our valuable wood resources – these do not affect the use of your UpperSlide Cabinet Caddy

As a natural product, wood has color variations that give your UpperSlide Pull-Out Spice Caddy a one-of-a-kind look. We call this character, and we say, the more – the better.

Some of the character details you may notice are:

- Hardwood veneers can run from blonde beige to reddish browns in the same piece. Today’s veneer processes leave very little of the hardwood on the face and sand through of the veneers (about the size of a dime; not more than one per side) are within quality specifications
- Different directions of wood grains on the sides, backs, bases, and aprons are allowable
- Voids in the veneer core (up to ¼” (6.35mm) – are not considered defects; differing wood species in the veneer core and chipped veneer at the dowel holes (less than ¼” (6.35mm) and up to five (5) per unit) are allowable under quality specifications

Additionally, wood has a tendency to warp, bow, and/or twist during different seasonal humidity changes within your home. Warp, bow, and/or twist that exceeds ¼” (6.35mm) which renders the UpperSlide Cabinet Caddy(s) unusable would be considered for replace during the 30-day warranty.

Wood Finish Information

If you purchased your UpperSlide Pull-Out Spice Caddy(s) pre-finished, it has two coats of a durable water-based (low-VOC) semi-gloss clear coat. The finish has been applied to the

primary/exterior surfaces of your new caddy(s). It is a utility finish, not a furniture finish, and may not be smooth or shiny. The purpose of the finish is to keep the wood clean over its many years of service.

INSTALLATION AND USE INSTRUCTIONS

Please read all instructions completely before installing your product

PRODUCT WARNINGS


- This product **MUST** be attached with the supplied screws, other screws, and/or otherwise affixed, to the bottom of a cabinet, or permanently fixed shelf, before use
- The installation hardware supplied is rated for 10 lbs. (4.5kg) maximum load. Manufacturer assumes no liability, and/or responsibility for the durability of the installation(s)
- Proper eye and hearing protect must always be worn when installing the UpperSlide Cabinet Caddy(s)
- Improper use of hand/power tools could result in personal injury and/or product damage; follow the tool manufacturer's instructions for safe operation of equipment
- UpperSlide Cabinet Caddies are not intended for storing glassware, china, porcelain, ceramic, and/or glass dinnerware

Recommended tools needed:

- Pencil
- Tape measure/ruler
- Phillips head screwdriver
- Drill with 3/16" (5mm) drill bit **optional, but recommended for hardwood and particle board shelves and cabinets

Included hardware:

- 2 - #8 Wing Nuts
- 4 - #8 Lock Washers
- 4 - #8 Flat Washers
- 2 - #8 x 2" (5cm) Combination Flat/Phillips Head 'Break Off' screws

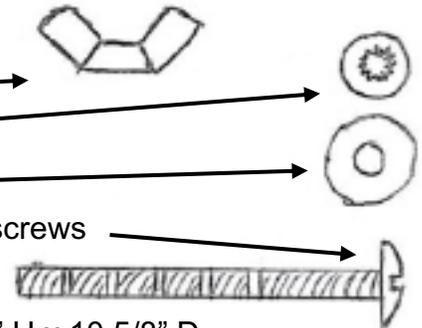

Specifications:


- Overall dimensions (Models 101 and 202): 11 3/4" W x 4 5/8" H x 10 5/8" D
 - Requiring a minimum opening width of 11 7/8"
 - Model 101 holds up to six containers, and lids, with a maximum size of 6 3/4" x 11 1/4" each.
 - Model 202 holds up to 12 containers, and lids, with a maximum size of 5 1/4" x 6 1/4" each.
- Widths of models 303 Small (8 1/2"), Medium (11 1/2"), and Large (14 1/2")
 - Fitting most standard cabinet outside widths of 12", 15" and 18" respectively, and requiring a minimum opening width of 8 5/8," 11 5/8" and 14 5/8" respectfully.

Your UpperSlide Cabinet Caddy(s) is fully assembled and proudly handcrafted by Americans with 99% "Made in USA" content, by Old Glory 1 Wood Works Co. Your UpperSlide Cabinet Caddy's installation hardware may, or may not, be "Made in USA."


INSTRUCTIONS

Before starting make sure the cabinet has the minimum opening as noted above. Empty the cabinet where the UpperSlide will be installed. The installer may need to empty and remove the shelf above to use the drill (the easiest method), or the installation template could be taped to the underside of the cabinet and drilled from below (the harder method). **The remainder of these instructions will refer to the easiest method (Working from inside the cabinet).**

1. Determine whether the cabinet is a face frame/frame less type cabinet. (See fig 1.).

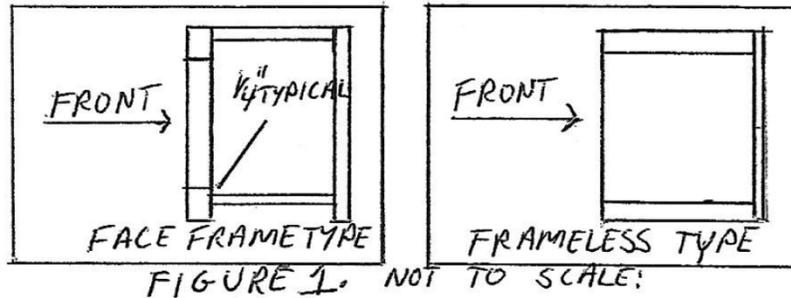


2. **Detach the full-size template from this packet and review the information contained on the template.**
3. Place the template on the bottom of the cabinet or shelf. For face frame cabinets just bump the template up to the face frame. For frame less cabinets, and cabinet shelves ensure the template is at least 3/8" back from the cabinet door (See fig. 2).

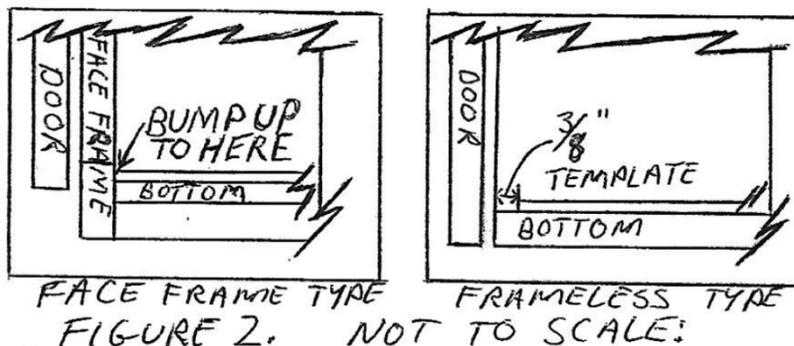


4. Follow the instructions on the template and drill the two (2) 3/16" holes along the center line.
5. You may want to detach the UpperSlide from the UpperSlide base, if you do not have someone to help you while applying the screws/hardware. **Note: This is not necessary, but helpful.**


To release the UpperSlide from the base: On a table, or counter covered with a towel, or soft cloth. Stand the UpperSlide on its back edge (with logo up). Extend the UpperSlide out and look for the black tabs (see diagram below) along the slide rails. Push on both black tabs, one on each slide then lift the UpperSlide (while extended) no more than 2 inches, and gently shake downward, to separate the top from the bottom.

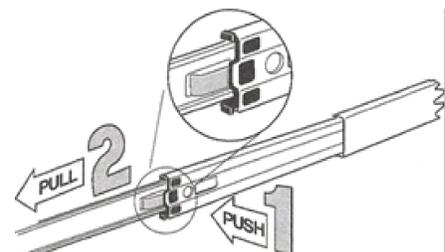

- Assemble screws/hardware as shown (See fig. 3) and insert them in the holes, attach washers, and wing nuts. While holding the screw with a screw driver, tighten the wing nut securely by hand.

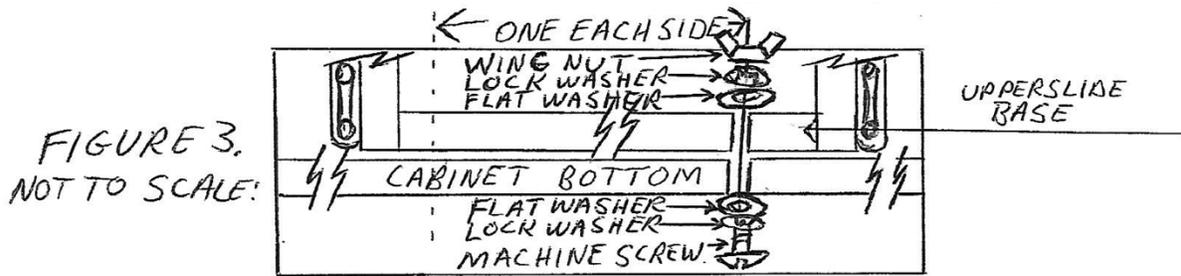

- Break off screws are supplied to accommodate differing thicknesses of cabinet bottoms and shelves. To ensure smooth operation of your UpperSlide Cabinet Caddy(s) the screws need to be broken off below the tops of the Wing Nuts. Using pliers at a notch in the screw (below top of the Wing Nut bend over screw until it breaks (as shown below).

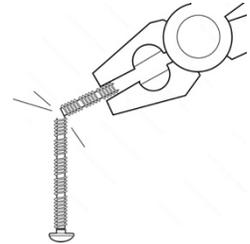

Read note below.

- If you separated the UpperSlide from the UpperSlide base. Re-align the upper slides with the correct slots on the lower slide and re-assemble them, it will push in firmly once to get the slides reset. Read note below.

Note: As you extend the UpperSlide there is a tendency to pull down on the slide out and cause the slide to be hard to move/bind. We have included a thumb pull position below the center of slide out to help avoid this issue. We find it's easiest to start the "slide out" with you finger and finish with your thumb (with slight lift) to avoid pulling down and binding the slide hardware.

WARRANTY

There is a 30-day WARRANTY (No Return Postage Paid) against defects in workmanship. Only defects that would render your 303 Pull-Out Spice Caddy(s) un-usable, would be given considerations for the replacement parts needed to bring the 303 Pull-Out Spice Caddy(s) up to specification(s) under the warranty terms/period. Your 303 Pull-Out Spice Caddy(s) was inspected and packed with care before shipping, and the quality was up to the warranty specifications.

RETURNS/EXCHANGES

If purchased from a third-party retailer – please contact us from their website for assistance as the policies can vary. For purchases directly from our website, please email us at: UpperSlide@gmail.com if you have questions about a return or exchange, and we can help. Any allowed returns are subject to restocking fee.

If product is damaged during shipment, please email us within 5 business days of delivery. We will issue a postage paid mailing label to be used within 30 days. Product will be inspected upon receipt and replacement shipped for no charge.

NOTE: Custom products cannot be returned.